


IMPORTANT SAFETY INSTRUCTIONS

- Read the instructions in conjunction with the illustrations before using for the first time and save this instructions.
- Before you connect the appliance, check if the voltage specified on the appliance corresponds to the mains voltage in your home.
- Never immerse any part of the appliance in water or any other liquid.
- Never put objects into the grille when the fan is connected to the mains.
- Keep a watchful eye on children. Never allow them to play with the fan.
- It is not advisable to expose people (esp. Babies and older People) to a continuous cold air stream for a long time.
- Do not use the fan in very hot or humid environments, such as bathrooms.
- Keep the fan away from lace curtains, plants etc.
- Do not connect the appliance to the mains voltage unless completely assembled and adjusted.
- If the mains cord of this appliance is damaged, it must only be replaced by electrical technicians, as special tools and/or parts are required.
- **WARNING- To Reduce The Risk Of Fire Or Electric Shock, Do Not Use This Fan With Any Solid - State Speed Control Device.**

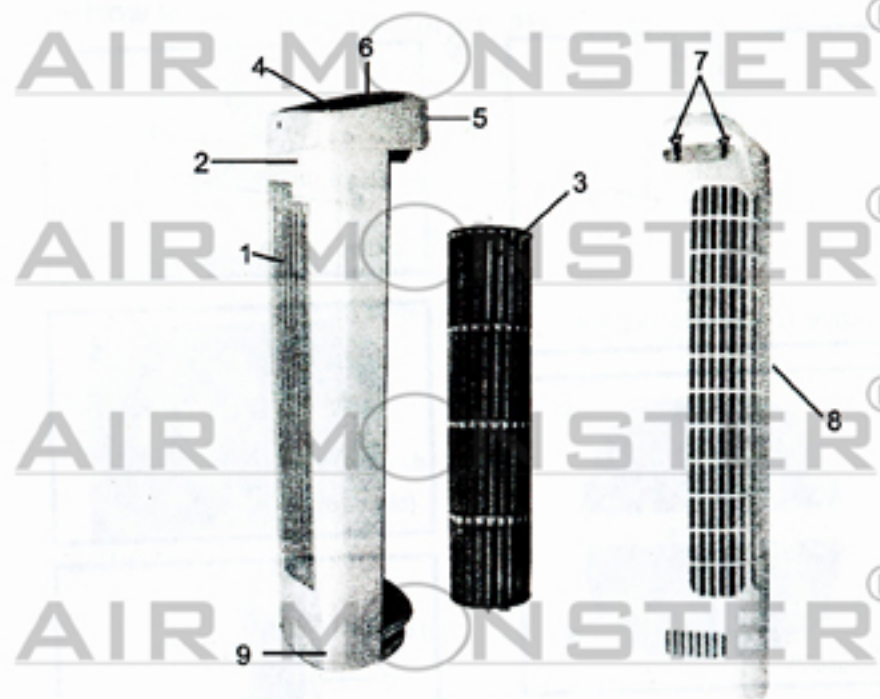

- | | | | |
|---|--------------------|----|-----------------|
| 1 | Grille | 7 | Rear Case Screw |
| 2 | Front Case | 8 | Rear Grille |
| 3 | Fan wheel | 9 | Cord |
| 4 | Switch | 10 | Stand Pole |
| 5 | Timer | 11 | Knob Screw |
| 6 | Oscillation Switch | 12 | Base |